




HAWKEYE DIRECTIONAL LLC

P.O. Box 890907 • Oklahoma City, OK 73189
Office: (405) 703-0034 • Toll Free: 844-703-0034 • Fax: (405) 703-0697
www.hawkeyedirectional.com

5.00 - 7/8 - 2.6 Fishing Diagram

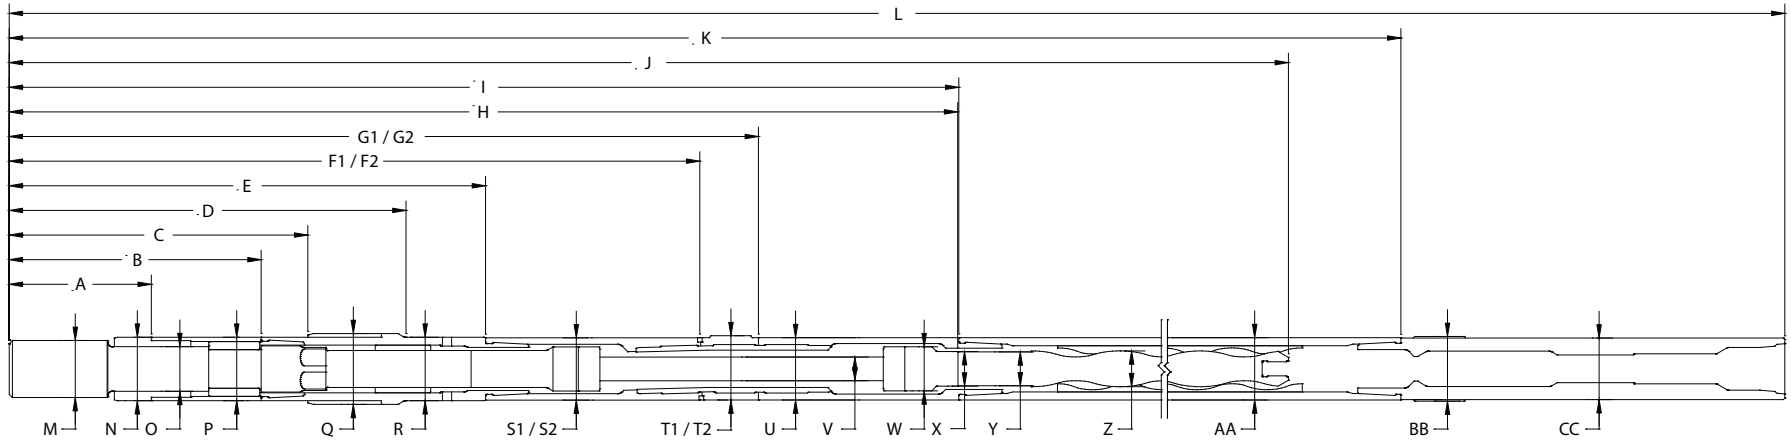

	END CAP END	BEARING HOUSING END	THREAD PROTECTOR START	PISTON HOUSING UPSET END	PISTON HOUSING END	BIT TO BEND (FIXED)	FIXED HOUSING END	BIT TO BEND (ADJUSTABLE)	ADJUSTING RING END	ADAPTOR HOUSING END	ROTOR ADAPTOR END	ROTOR END	STATOR END	ROTOR CATCH FLOAT SUB END	BIT BOX Ø	END CAP Ø	MANDREL Ø	BEARING HOUSING Ø	THREAD PROTECTOR Ø	PISTON HOUSING Ø	FIXED HOUSING Ø	FIXED HOUSING PAD Ø	KICK HOUSING Ø	ADJUSTING RING Ø	ADAPTOR HOUSING Ø	DRIVE SHAFT Ø	ROTOR ADAPTOR LARGE Ø	ROTOR ADAPTOR UNDERCUT Ø	ROTOR HEAD Ø	ROTOR MAJOR Ø	STATOR Ø	TOP SUB HARD BAND Ø	TOP SUB Ø
	A	B	C	D	E	F1	G1	F2	G2	H	I	J	K	L	M	N	O	P	Q	R	S1	T1	S2	T2	U	V	W	X	Y	Z	AA	BB	CC
5"	IMPERIAL - USC (Lengths, Diameters = in.)																																
5" 7-8 2.6 STAGE HR SERIES 2	15.5	-	20.2	28.2	38.6	45.7	52.2	56.3	60.8	77.2	77.1	297.1	306.5	337.6	4.6	5.2	3.6	-	5.8	5.1	5.1	5.7	5.1	5.7	5.1	1.9	3.6	2.8	2.8	3.1	5.0	5.3	5.0
5"	METRIC - SI (Lengths = m) (Diameters = mm)																																
5" 7-8 2.6 STAGE HR SERIES 2	0.39	-	0.51	0.72	0.98	1.16	1.33	1.43	1.54	1.96	1.96	7.55	7.79	8.58	117.6	130.81	92.2	-	146.05	128.52	128.52	143.76	128.52	143.76	128.52	49.02	90.93	71.37	69.85	78.74	127	133.35	127